


C315M Laser Control Panel 2

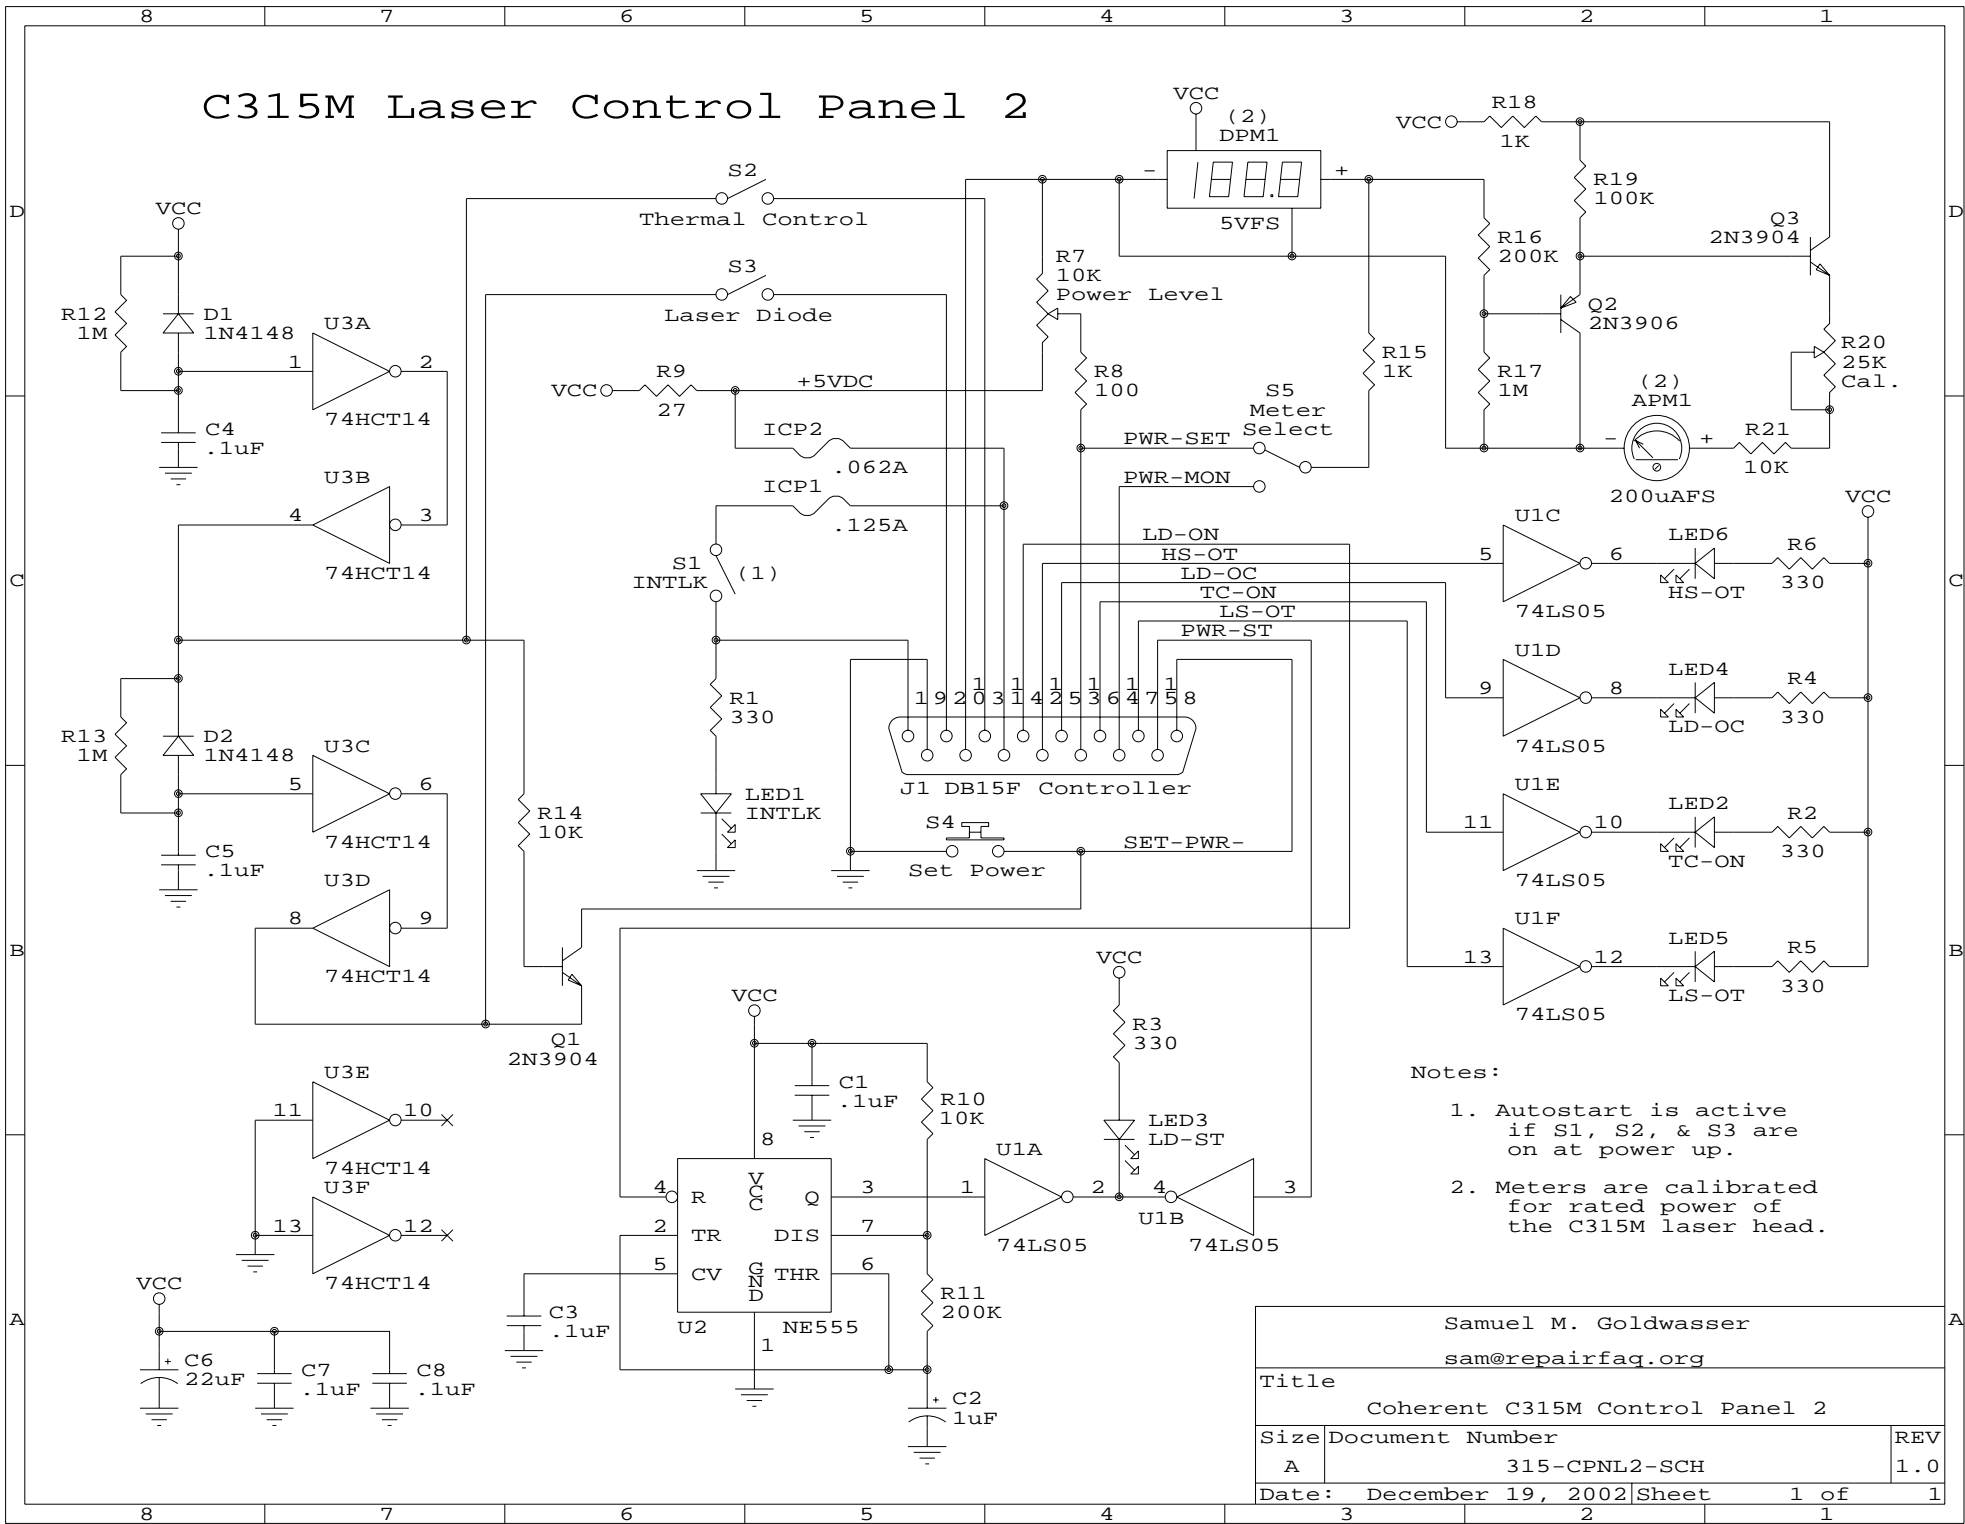

Notes:

1. Autostart is active if S1, S2, & S3 are on at power up.
2. Meters are calibrated for rated power of the C315M laser head.

Samuel M. Goldwasser		
sam@repairfaq.org		
Title		
Coherent C315M Control Panel 2		
Size	Document Number	REV
A	315-CPNL2-SCH	1.0
Date:	December 19, 2002	Sheet 1 of 1